

# Technical Data

900 Compact Weather Station

---

## CDQ-T1C-900L Compact Weather Station

### User Guide



# Technical Data

900 Compact Weather Station

---

## Catalog

Product Brief.....	1
Product Technical Data .....	3
Product Dimensions .....	4
Accessory and Parts .....	5
MODBUS RTU Communication Protocol .....	6
Quality Assurance and After-sales Services .....	12

# Technical Data

900 Compact Weather Station

## 900 Compact Weather Station

- ◆ **Product Brief**

900 compact weather station integrates ten meteorological parameters, Ambient Temperature, Relative Humidity, Atmospheric Pressure, Wind Speed, Wind Direction, Optical Rainfall, Noise, [Illumination/Solar Radiation](#) (either-or), PM<sub>2.5</sub> and PM<sub>10</sub>, in one structure. It realizes 24 hours continuous online monitoring of outdoor meteorological parameters, and output these data to users through digital communication interface all at once.

- ◆ **Application**

- Meteorological Monitoring
- Micro Environmental Monitoring
- Grid Environment Monitoring
- Agricultural Meteorological Monitoring
- Meteorological Traffic Monitoring
- Photovoltaic Environment Monitoring
- Meteorological Monitoring of Wind Power Generation
- Smart City/Intelligent Light Pole Environmental Monitoring

- ◆ **Features**

- Small in size
- High integration
- Easy to install
- Protective cover with special process heat insulation treatment
- Support extended parameter measurement
- Free testing software XF\_PcSoftV1.0 (ask your salesperson for it)
- Integrated design
- Compact structure with no moving parts
- One year warranty

- ◆ **Product Technical Data**

Parameters	Measuring Range	Accuracy	Resolution	Sampling Frequency
Ambient Temperature	-40-85°C	±0.3°C@25°C	0.01°C	1HZ
Relative Humidity	0-100%RH	±3%RH (10%-80%RH, No Condensation)	0.01%RH	1HZ

# Technical Data

900 Compact Weather Station

Wind Speed (Third Generation)	0-40m/s	0.01m/s	$\pm (0.5+0.05V)$ M/S	10HZ
Wind Direction (Third Generation)	0-359.9°	0.1°	$\pm 5^\circ$ (Wind Speed < 10M/S)	10HZ
Atmospheric Pressure	500-1100hPa	$\pm 0.5$ hPa (25°C, 950-1100hPa)	0.1hPa	1HZ
Optical Rainfall	0-200mm/h	$\pm 15\%$	0.2mm	1HZ
PM <sub>2.5</sub>	0-500ug/m <sup>3</sup> (Extensible 1000ug/m <sup>3</sup> )	$\pm (10+10\%)$ ug/m <sup>3</sup>	1ug/m <sup>3</sup>	1HZ
PM <sub>10</sub>	0-500ug/m <sup>3</sup> (Extensible 1000ug/m <sup>3</sup> )	$\pm (10+10\%)$ ug/m <sup>3</sup>	1ug/m <sup>3</sup>	1HZ
Illuminance	0- 100KLux	$\pm 3\%$ Or 1%F.S	10Lux	1HZ
Solar Radiation	0-2000W/m <sup>2</sup>	$\pm 5\%$	1W	1HZ
Noise	30- 130dB	$\pm 1.5$ dB	0.1dB	1HZ
Operating Temperature	-40°C—80°C			
Output	Standard product with RS485 interface, ModbusRTU; Customizable option SDI- 12(Extra costs apply)			
Maximum Output Frequency	Passive Mode: 1/S Active Mode: 1/min			
Power Supply	DC9-24V			
Level of Protection	IP65			
Mounting Manner	Standard Product is sleeve fixed (Optional: matching parts, extra costs apply, see Accessory and Parts)			
Fixed Trestle	Optional: 1.5 meter, or 1.8 meter bracket (extra cost apply)			
Cable	3 meter cable line (Optional: 10 meter cable line available for extra cost )			
Customizable	Heating function			

# Technical Data

900 Compact Weather Station


Function (extra costs apply)	
Remarks	<p>1. This Sensor with Ambient Temperature and Relative Humidity integrated, is installed in a three-layer outdoor radiation shield. The radiation shield adopts PC+ fiber special proportion configurataion, and the interior is sprayed with thermal insulation layer, to minimize the solar radiation influence.</p> <p>2. Supplementary Description on Wind Speed, Wind Direction: The wind speed and wind direction is measured through ultrasonic principle.</p> <p>3. Optical Rainfall: automatically senses rain falling on its outer surface and calculates the amount of rainfall according to the size and number of raindrops. Compare with the traditional physical bucket rain gauge, the accuracy of the optical rain gauge is its weakness. Most of the time, the reading of the optical rain gauge will be close to the bucket rain gauge, but abnormal events will be significantly different (heavy rain). But it is an integrated design, more suitable for application in site where tipping bucket rainfall is hard to apply, not restried by the installation situation. And when the rainfall is small and light, it is more sensitive.</p> <p>4. Noise: Select high precision electret pickup, A weighting method to measure environmental noise. It is small in volume, high precision and high sensitivity.</p> <p>5. PM<sub>2.5</sub>/PM<sub>10</sub> Particular Matter: Based on the principle of laser scattering, the number of suspended particulate matter with different particle sizes in the air in a unit volume can be continuously collected and calculated, that is, the conentration distribution of particulate matter.</p> <p>6. Illuminance/ Solar Radiation (Either-or): Select optical components of different specifications and special filters to measure illumination and solar radiation data.</p> <p>7. XF_PcSoftV1.0: the upper computer reading software, Nong-IoT developed for XF series compact weather station.</p>

★ Specifications may be updated without prior notice.

# Technical Data

900 Compact Weather Station

- **Product Dimension**

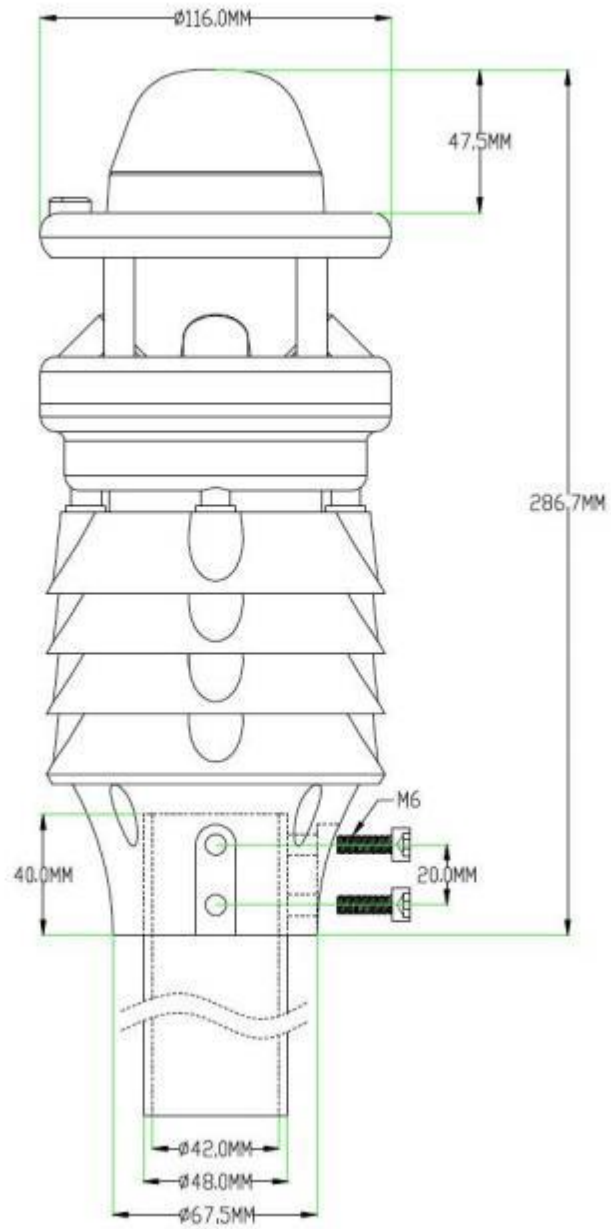


# Technical Data


900 Compact Weather Station

## ♦ Accessory and Parts

Flange Mounting Manner:

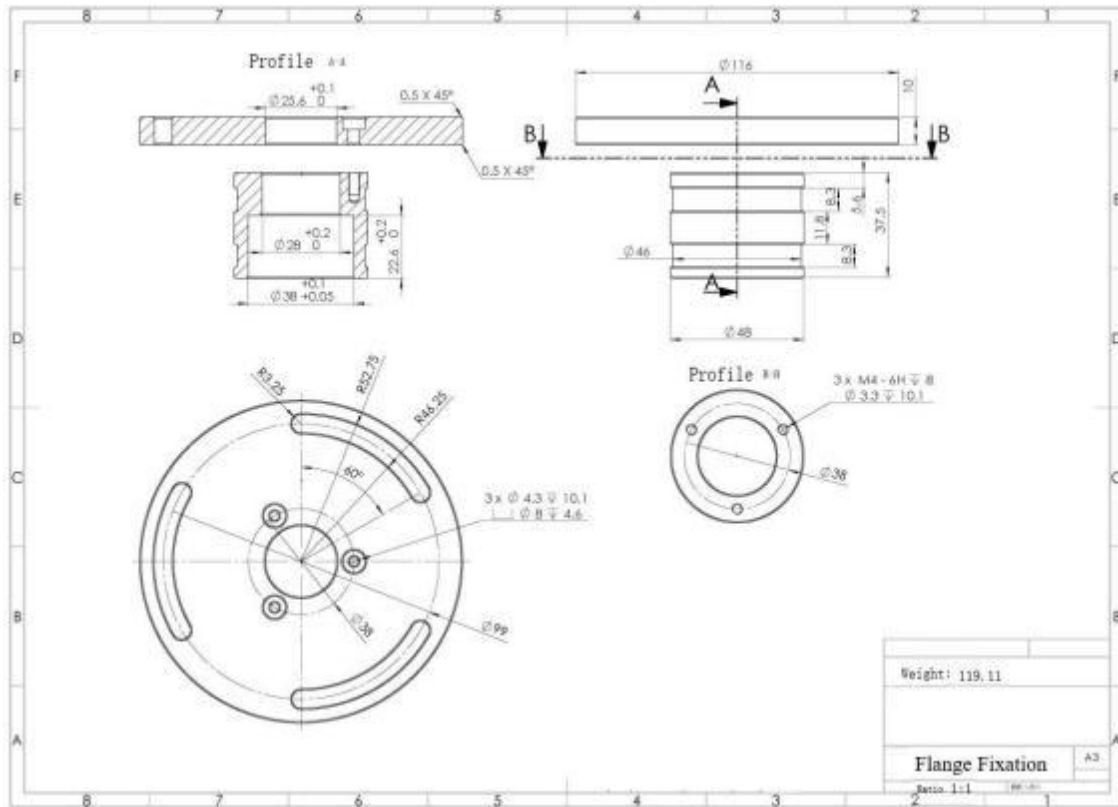

Bending Plate Mounting Manner:

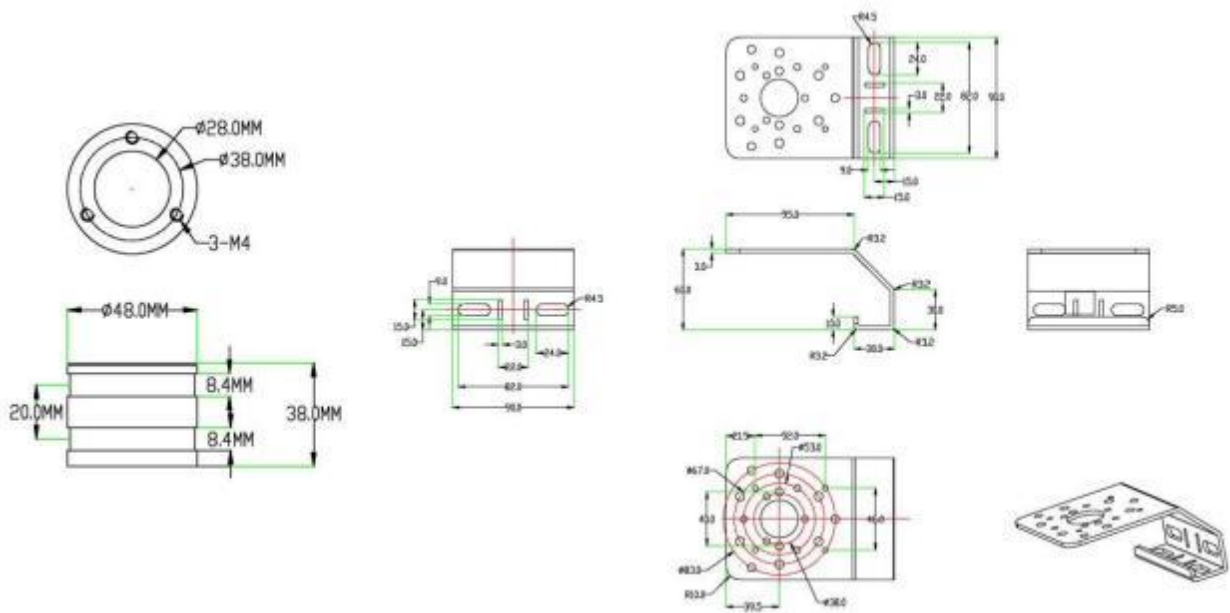

# Technical Data

900 Compact Weather Station

## MODBUS RTU Communication Protocol

### (Apply to 900 product)

Baud Rate: 9600

Data Bits: 8

Stop Bit: 1

Check Bit: None

#### 1.1 CRC Instruction:

Among all the following instructions, the two bytes of CRC16 in MODBUS RTU protocol are as follows: the low byte comes before the high byte comes after.

In the following instructions, the assumed sensor address is 0xFF (the sensor default address is FF)

#### 1.2 Return error code rule:

When receive error instruction (including CRC16 validation error), no error code are returned. It is considered to be a failure, when there is no return data, 200ms after the instruction is issued. Upper computer may resend instruction.

#### 1.3 Standard MODBUS register declaration

Special Notice:

The quantity or length of the register in Modbus is two bytes with 16 bits as a unit (the high byte comes first, and the low bytes follows), instead of one byte with 8 bits as a unit.

User shall ensure in command, the address and quantity of register, are within the range specified by the system. Otherwise, the output of the sensor will be unpredictable.

Users shall ensure that the MODBUS command complies with the requirements of this manual in the software design of the upper computer, and the minimum query period supported is 1s/ time.

# Technical Data

900 Compact Weather Station

## Input register: read with function code 03

Address	Operation	Contents	Note
0x0001	Read-only	Noise, a hexadecimal number amplified by 10 times, such as 0x01193, means $403/10=40.3\text{dB}$	
0x0002	Read-only	Hydrogen Sulfide/TVOC, a hexadecimal number.	
0x0003	Read-only	SO <sub>2</sub> concentration, a hexadecimal. For example, 0x0172 indicates that SO <sub>2</sub> concentration is 370ppb.	
0x0004	Read-only	NO <sub>2</sub> concentration, a hexadecimal number. For example, 0x0036 indicates that NO <sub>2</sub> concentration is 54ppb.	
0x0005	Read-only	CO concentration, a hexadecimal number. For example, 0x0A00 indicates that CO concentration is 2560ppb.	
0x0006	Read-only	O <sub>3</sub> concentration, a hexadecimal number. For example, 0x0123 indicates that O <sub>3</sub> concentration is 291ppb.	
0x0007	Read-only	PM <sub>2.5</sub> concentration, a hexadecimal number. For example, 0x0172 indicates that PM <sub>2.5</sub> concentration is 370 $\mu\text{g}/\text{m}^3$ .	
0x0008	Read-only	PM <sub>10</sub> concentration, a hexadecimal number. For example, 0x0193 indicates that PM <sub>10</sub> concentration is 403 $\mu\text{g}/\text{m}^3$ .	
0x0009	Read-only	Ambient Temperature, a hexadecimal number add 40 then magnified 100 times. For example, 0x1B00 indicates $6912/100-40=29.12^\circ\text{C}$	
0x000A	Read-only	Relative Humidity, a hexadecimal number magnified by 100 times. For example, 0x1603 indicates $5635/100=56.35\%\text{RH}$ .	
0x000B	Read-only	Atmospheric Pressure, a hexadecimal number magnified by 10 times. For example, 0x2784 indicates $10116/10=1011.6\text{hPa}$ .	
0x000C	Read-only	Wind Speed, a hexadecimal number magnified by 100 times. For example, 0x0125 indicates $293/100=2.93\text{m/s}$	
0x000D	Read-only	Wind Direction, a hexadecimal number magnified by 10 times. For example, 0x0C14 indicates $3092/10=309.2^\circ$	The North points to the 0°
0x000E	Read-only	Continuous Rainfall, a hexadecimal number magnified by 10 times , For example, 0x0016 indicates 2.2mm.	

# Technical Data

900 Compact Weather Station

0x000F	Read-only	Solar Radiation, a hexadecimal number. For example, 0x0172 indicates 370W/m <sup>2</sup> .	
0x0010	Read-only	Illumination, a hexadecimal number magnified by 100 times. For example, 0x0123 indicates 2.91.Klux.	
0x0011	Read-only	UV index	
0x0012	Read-only	CO2, a hexadecimal number. For example, 0x01F4 indicates 500ppm.	
0x0013	Read-only	Negative Oxygen Ion, a hexadecimal number shrunked by a factor of 10. For example, 0x01F4 indicates Negative Oxygen Ion number is 5000.	
0x0014- 0x001f	Read-only	Keep	
0x0020	Read-only	Electronic compass, a hexadecimal number. For example, 0x0036 indicates currently pointing to 54.	The North points to the 0°
0x0021	Read-only	Pitch angle 1	Custom-made
0x0022	Read-only	Pitch angle 2	Custom-made
0x0023	Read-only	Pitch angle 3	Custom-made
0x0024	Read-only	longitude-1	Custom-made
0x0025	Read-only	longitude-2	Custom-made
0x0026	Read-only	latitude-1	Custom-made
0x0027	Read-only	latitude-2	Custom-made
0x0028	Read-only	Altitude	Custom-made

## 1.4 Example

The following is an example of how to use Modbus RTU commands to access system registers:

1. Read multiple input registers (10 real time data) command

Send: FF 03 00 01 00 10 00 18

FF	03	00 01	00 10	00 18
System Address	Function Code	Register Address	Number of Registers	CRC16 check digit automatically generated by

# Technical Data

900 Compact Weather Station

				software
--	--	--	--	----------

Answer: FF 03 20 02 08 00 00 00 00 00 00 00 00 00 00 00 11 00 14 1A 57 0C 5F 27 83 00 11 0C 14  
00 01 00 00 01 26 2C 3C

FF	03	0A	02 08 00 00 00 00 00 00 00 00 00 00 00 00 00 00 11 00 14 1A 57 0C 5F 27 83 00 11 0C 14 00 01 00 00 01 26	2C 3C
System Address	Function Code	The number of bytes in a data segment	Segment Data	CRC16 check bit

Data parse:

$$0X0208=0x02*256+0x08=520$$

$$\text{Noise}=520/10=52\text{dB}$$

$$0x0011=17$$

$$\text{PM2.5}=17 \text{ ug/m}^3$$

$$0x0014=20$$

$$\text{PM10}=20 \text{ ug/m}^3$$

$$0x1A57= 0x1A * 256 + 0x57= 6743$$

$$\text{Ambient Temperature} = 6743/100-40=27.43^\circ\text{C}$$

$$0x0C5F= 0x0C * 256 + 0x5F= 3167$$

$$\text{Relative Humidity}=3167/100=31.67\%\text{RH}$$

$$0x2783= 0x27 * 256 + 0x83= 10115$$

$$\text{Atmospheric Pressure}= 10115/10= 1011.5\text{hPa}$$

$$0x0011=17$$

$$\text{Wind Speed}= 17/100=0.17\text{m/s}$$

$$0x0C14=0x0C * 256 + 0x14= 3092$$

$$\text{Wind Direction}=3092/10=309.2^\circ$$

$$\text{Rainfall}= 1/10=0.1\text{mm}$$

$$0x0109=0x01*256+0x09=265$$

$$\text{Illumination}=265/100=2.65\text{klux}=2650\text{lux}$$

## 2. Read a single input register command

Send: FF 03 00 09 00 01 41 D6

FF	03	00 09	00 01	41 D6
System Address	Function Code	Register Address	Number of Registers	CRC16 check digit automatically generated by

# Technical Data

900 Compact Weather Station

				software
--	--	--	--	----------

Answer: FF 03 02 1A 57 DB 0E

FF	03	02	1A 57	DB 0E
System Address	Function Code	The number of bytes in a data segment	Segment Data	CRC16 check bit

Data parse:

$$0x1A57 = 0x1A * 256 + 0x57 = 6743$$

$$\text{Ambient Temperature} = 6743/100 - 40 = 27.43^{\circ}\text{C}$$

### 3. Read address register command

Send: 00 03 00 00 01 85 DB

00	03	00 00	00 01	85 DB
	Function Code	Register Address	Number of Registers	CRC16 check digit automatically generated by software

Answer: 00 03 02 00 01 44 44

00	03	02	00 01	44 44
	Function Code	The number of bytes in a data segment	Segment Data	CRC16 check bit

Segment data 0x0001 = 01    System address 01

### 4. Modify internal register (system address) command (change the address to 0x33)

Send: 00 06 00 00 00 33 C8 0E

00	06	00 00	00 33	C8 0E
	Function Code	Register Address	New Address	CRC16 check bit

Answer: 00 06 00 00 00 33 C8 0E (indicates that the modification is successful)

00	06	00 00	00 33	C8 0E
	Function Code	Starting Address	New Address	CRC16 check bit

# Technical Data

900 Compact Weather Station

## 5. Set the rainfall accumulation time

Send: 00 06 01 07 00 0A B8 21

00	06	01 07	00 0A	B8 21
	Function Code	Register Address	Cumulative Time (10 Minutes)	CRC16 check bit

Answer: 00 06 01 07 00 0A B8 21 (indicates that the modification is successful)

00	06	01 07	00 0A	B8 21
	Function Code	Starting Address	Cumulative Time (10 Minutes)	CRC16 check bit

**Note:** This device factory default setting is the continuous accumulation unclear 0 mode. When the rainfall accumulation time is set to 0, the device does not automatically clear the rainfall, and it has been accumulated continuously. The rainfall can be reset to zero by restarting the power or resetting the rainfall accumulation time ( sending command 00 06 01 07 00 00 38 26 cleared to 0, regularly)

## 6. Set magnetic decrement correction (only for electronic compass function)

Send: 00 06 01 06 00 05 A9 E5

00	06	01 06	00 05	A9 E5
Station Number	Function Code	Register Address	Correction Angle	CRC16 check bit

Answer: 00 06 01 06 00 05 A9 E5 (indicates that the modification is successful)

00	06	01 06	00 05	A9 E5
Station Number	Function Code	Register Address	Correction Angle	CRC16 check bit

### Correction Angle Implication

The high eight digits indicate the direction of correction, 0x00 represent positive correction, 0x01 represent negative correction.

The low eight digits indicate the angle of the correction

Example: 0x00 05 represent that require to add 5 degree to the output

0x01 03 represent that require to reduce 3 degree to the output

## 7. Read the latitude and longitude information

Send AT+GPS#

Answer

GPS:36.12345,N;114.12345,E;2019-01-01,D;10:20:00,T;0040.2,H#

Supplementary agreement: (the default device address is FF)

# Technical Data

900 Compact Weather Station

---

Active reporting period (Register Address 0x01 0A) Unit is min, 0 indicates no reporting  
00 06 01 0A 00 0A 29 E2 (Set the active reporting period to 10 minutes)

Active reporting length (Register Address 0x01 0B)  
00 06 01 0B 0C 02 7C E4 (Active reporting register address 0C-0D)

Baud Rate (Register Address 0X0102)  
00-06 respectively represent 2400、4800、9600、19200、38400、57600、115200

**00 06 01 02 00 02 A9 E6 (Set the baud rate to 9600, non-professionals shall not change it by themselves)**